FITTING INSTRUCTIONS

MAKE: HARLEY-DAVIDSON SOFTAIL SLIM/STREET BOB/ LOW RIDER/DELUXE (18-23)
PART: NITRON R1 WITH HPA
PART NO: NTBKHD03_

NITRON® SUSPENSION

INSTALL NOTES:

The shock should be installed with the hydraulic preload hose exiting on the left hand side of the shock body. Feed the hydraulic hose between the frame and the rear cylinder head and loop it back along the underside of the subframe rail as shown. Secure the hose with the supplied zip ties. Mount the hydraulic adjuster body to the sidepod with the supplied bracket as shown. Install the 2mm spacer between the sidepod and the bracket for the top screw and the 6mm spacer for the lower screw to space the bracket correctly.

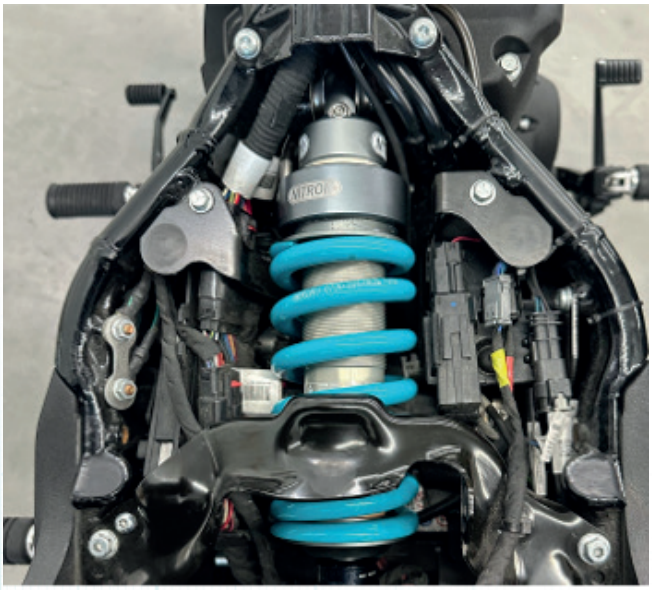

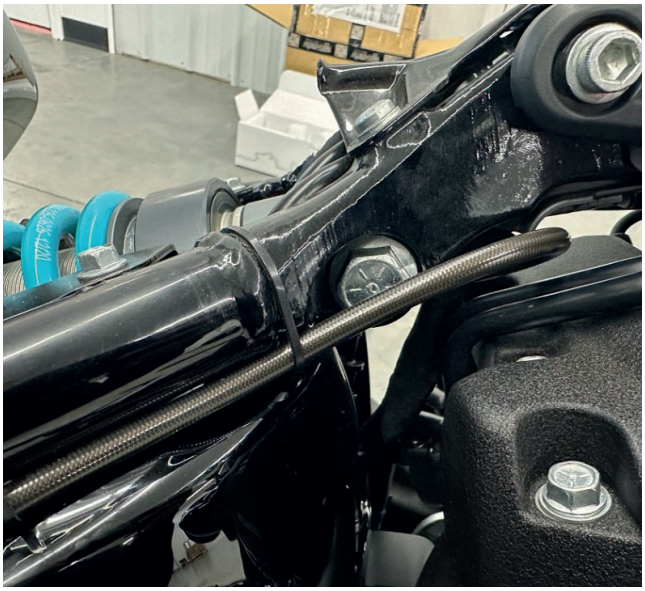

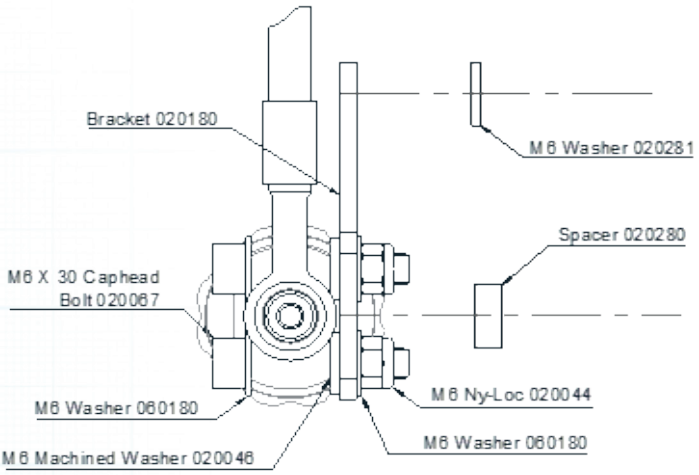

For more information, get in contact
+44 (0)1993 849 449 | +1 (951 696-1111 | sales@nitron.com