NITRON®
SUSPENSION

FITTING INSTRUCTIONS

TRIUMPH TIGER 900 RALLY PRO (20-26) NITRON ADV R1 WITH HPA

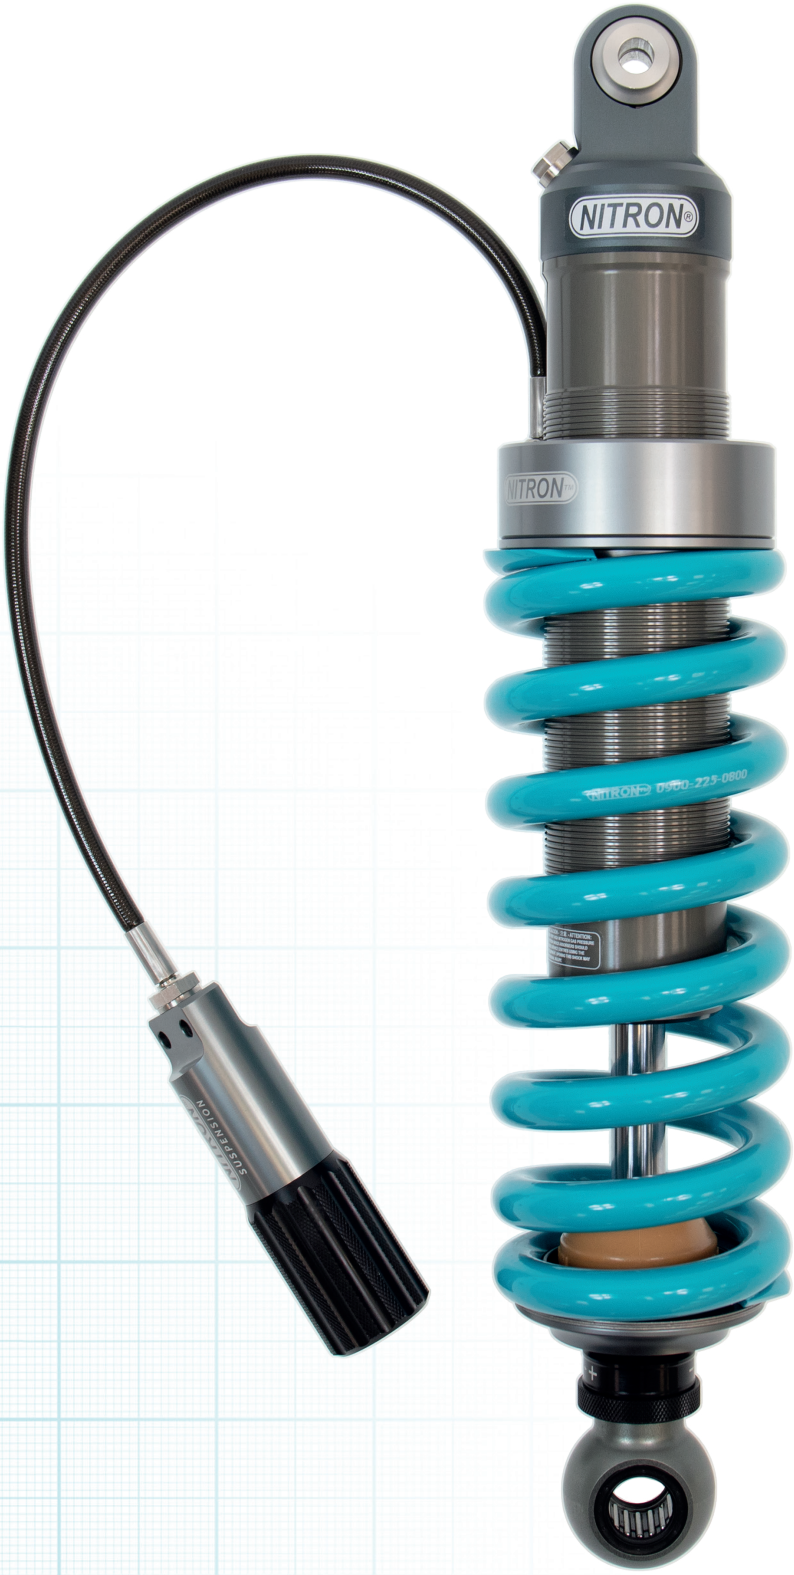

ISSUE NO. 1

FITTING INSTRUCTIONS

MAKE: TRIUMPH TIGER 900 RALLY PRO (20-26)
PART: NITRON ADV R1 WITH HPA
PART NO: NTBKT37_

NITRON® SUSPENSION

INSTALL NOTES:

The shock should be installed with the hydraulic preload adjuster hose exiting on the left hand side of the shock body as shown. Mount the hydraulic adjuster body using the supplied bracket between the pillion footrest hanger and subframe using the rear most mounting bolt. Install the aluminium spacer between the footrest and subframe at the other mounting bolt to space the footrest evenly.

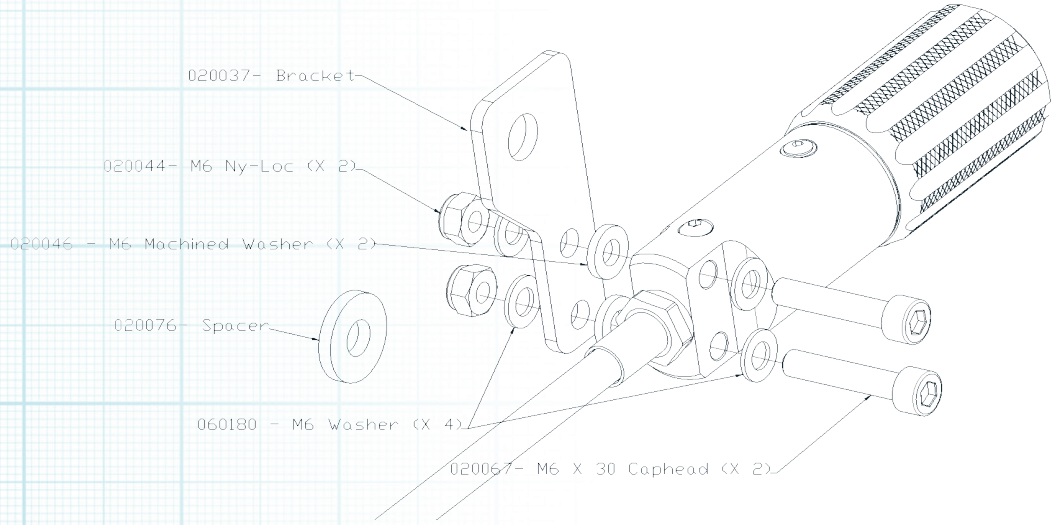

For more information, get in contact
+44 (0)1993 849 449 | +1 (951 696-1111 | sales@nitron.com