NITRON®
SUSPENSION

FITTING INSTRUCTIONS

TRIUMPH TRIDENT 800 (26-27) NITRON R3 WITH HPA

ISSUE NO. 1

FITTING INSTRUCTIONS

MAKE: TRIUMPH TRIDENT 800 (26-27)
PART: NITRON R3 WITH HPA
PART NO: NTBKT38_

NITRON® SUSPENSION

INSTALL NOTES:

The shock should be installed with the remote reservoir hose exiting on the underside of the shock body. Route the hose around to the left handside and mount the remote reservoir using the supplied bracket between the pillion footrest and subframe as shown. If your shock is fitted with the optional hydraulic preload adjuster, the hose should exit the hydraulic cylinder and loop back over the shock body as shown. Mount the hydraulic adjuster body using the supplied bracket between the subframe and pillion footrest hanger on the right handside.

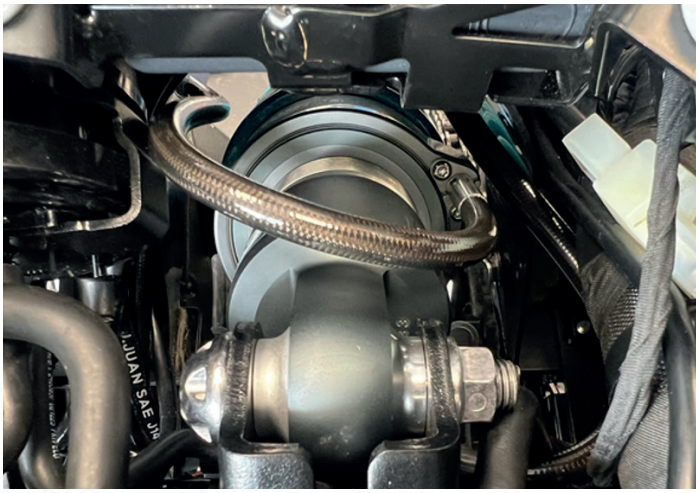

For more information, get in contact
+44 (0)1993 849 449 | +1 (951) 696-1111 | sales@nitron.com